

STUDIO RANGE - SATIN CHROME

Rocker Light Switches



Y33.200.SC
1 Gang Rocker Switch (10
Amp)



Y33.210.SC
2 Gang Rocker Switch (10
Amp)



Y33.220.SC
3 Gang Rocker Switch (10
Amp)



Y33.230.SC
4 Gang Rocker Switch (10 Amp)



Y33.201.SC
1 Gang Intermediate Rocker Switch (10
Amp)

Classic Toggle Switches



Y33.2400.SC
1 Gang Toggle Switch



Y33.2410.SC
2 Gang Toggle Switch



Y33.2420.SC
3 Gang Toggle Switch



Y33.2430.SC
4 Gang Toggle Switch



Y33.2401.SC
1 Gang Intermediate Toggle
Switch

Stockholm Toggle Switches



Y33.8400.SC
1 Gang Stockholm
Toggle



Y33.8410.SC
2 Gang Stockholm
Toggle



Y33.8420.SC
3 Gang Stockholm
Toggle



Y33.8430.SC
4 Gang Stockholm
Toggle



Y33.8401.SC
1 Gang Intermediate Stockholm
Toggle

Multi Location Dimmers (Compatible with LED bulbs)



Y33.260.MLP
1G Multi Location Primary
Dimmer



Y33.260.MLS
1G Multi Location Secondary
Dimmer



Y33.270.MLP
2G Multi Location Primary
Dimmer



Y33.270.MLS
2G Multi Location Secondary
Dimmer



Y33.280.MLP
3G Multi Location Primary Dimmer



Y33.280.MLS
3G Multi Location Secondary Dimmer



Y33.290.MLP
4G Multi Location Primary Dimmer



Y33.290.MLS
4G Multi Location Secondary Dimmer

TED Dimmer Switches (Compatible with LED bulbs)



Y33.260.TED
1 Gang TED Dimmer (Compatible with LED Lamps)



Y33.270.TED
2 Gang TED Dimmer (Compatible with LED Lamps)



Y33.280.TED
3 Gang TED Dimmer (Compatible with LED Lamps)



Y33.290.TED
4 Gang TED Dimmer (Compatible with LED Lamps)

Dimmer Switches (Compatible with halogen/ incandescent bulbs)



Y33.260.250
1 Gang Dimmer 250 watts (Compatible with halogen/ incandescent bulbs)



Y33.260.400
1 Gang Dimmer 400 watts (Compatible with halogen/ incandescent bulbs)



Y33.270.250
2 Gang Dimmer 250 watts (Compatible with halogen/ incandescent bulbs)



Y33.270.400
2 Gang Dimmer 400 watts (Compatible with halogen/ incandescent bulbs)



Y33.280.250

3 Gang Dimmer 250 watts (Compatible with halogen/ incandescent bulbs)



Y33.280.400

3 Gang Dimmer 400 watts (Compatible with halogen/ incandescent bulbs)



Y33.290.250

4 Gang Dimmer 250 watts (Compatible with halogen/ incandescent bulbs)



Y33.290.400

4 Gang Dimmer 400 watts (Compatible with halogen/ incandescent bulbs)

Mixed Toggle Dimmer Switches



Y33-1TOG-1TED
2G 1xToggle 1xTED



Y33-2TOG-1TED
3G 2xToggle 1xTED



Y33-1TOG-2TED
3G 1xToggle 2xTED



Y33-3TOG-1TED
4G 3xToggle 1xTED



Y33-2TOG-2TED
4G 2xToggle 2xTED



Y33-1TOG-3TED
4G 1xToggle 3xTED

 
Plug Sockets




Y33.240.SCBK
Single Socket (13 Amp)



Y33.250.SCBK
Double Socket (13 Amp)

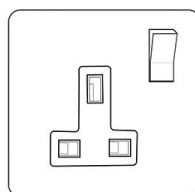

Y33.240.SCW
Single Socket (13 Amp)

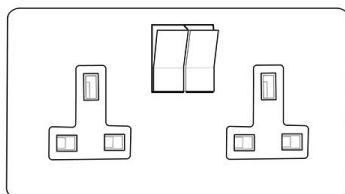 

Y33.250.SCW
Double Socket (13 Amp)

 
USB Sockets




C-Y33.2559.SCW
2G 13A Socket with USB-A+C



C-Y33.2559.SCBK
2G 13A Socket with USB-A+C

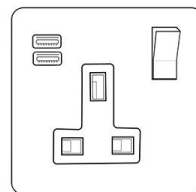

 C-Y33.2459.SCBK
1G 13A Socket with USB-A+C

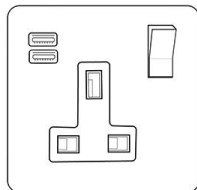


C-Y33.2459.SCW
1G 13A Socket with USB-A+C

Unswitched Socket



 Y33.282.BK
5 Amp 3 Round Pin Socket

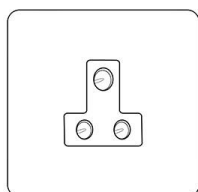

Y33.282.W
5 Amp 3 Round Pin Socket

 
Cooker Switches



Y33.263.SC
45A DP Cooker Switch with Neon (single plate)



Y33.262.SCBK
45A Cooker Unit + 13A Socket

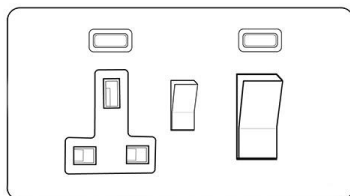


Y33.262.SCW
45A Cooker Unit + 13A Socket

Shaver Sockets



 Y33.285.BK
Shaver Socket Output Voltage
110/240V




Y33.285.W
Shaver Socket Output Voltage
110/240V

Key Card Switch



 Y33.7905.BK
Key Card Switch

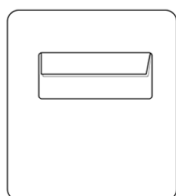

Y33.7905.W
Key Card Switch

Fused Spur Units



Y33.234.BK
Unswitched Spur (13
Amp)



 
Y33.235.SCBK
Switched Spur (13 Amp)




Y33.236.SCBK
Switched Spur with Neon (13
Amp)




Y33.238.SCBK
Switched Spur with Neon + Cord (13
Amp)

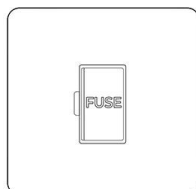


Y33.234.W
Unswitched Spur (13
Amp)

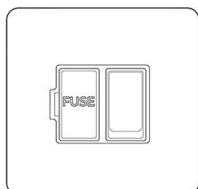 

Y33.235.SCW
Switched Spur (13 Amp)

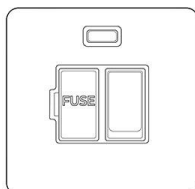 

 Y33.236.SCW
Switched Spur with Neon (13
Amp)

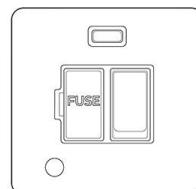

Y33.238.SCW
Switched Spur with Neon + Cord (13
Amp)

Double Pole Switches



Y33.205.SC
20A Double Pole Switch



Y33.206.SC
20A Double Pole Switch with
Neon

Fan Isolator Switches



Y33.2990.SC
6A Triple Pole Fan Isolator
Switch

TV and Satellite Sockets



Y33.221.W
1 Gang Non-Isolated TV Coaxial
Socket



Y33.223.W
1 Gang Isolated TV Coaxial
Socket



 
Y33.222.BK
2 Gang TV Coaxial
Socket




Y33.225.BK
1 Gang Satellite Socket




Y33.226.BK
TV/Satellite Socket

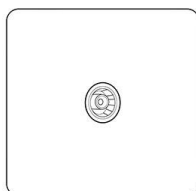

 
Y33.221.BK
1 Gang Non-Isolated TV Coaxial
Socket

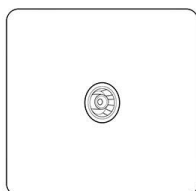

 
Y33.223.BK
1 Gang Isolated TV Coaxial
Socket

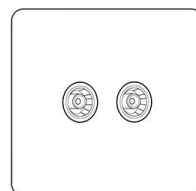


Y33.222.W
2 Gang TV Coaxial
Socket

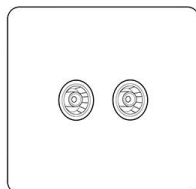 


Y33.224.W-DIP
TV/FM Diplexed Socket

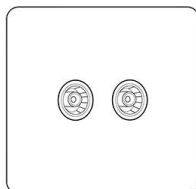 

Y33.224.BK-DIP
TV/FM Diplexed Socket

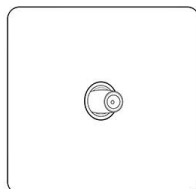 

Y33.225.W
1 Gang Satellite Socket

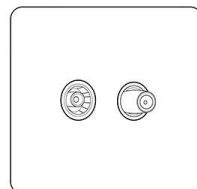 

Y33.226.W
TV/Satellite Socket

Telephone and Data Sockets



Y33.266.BK-S
1 Gang Secondary Line
Socket



Y33.267.BK-M
1 Gang Master Line
Socket



Y33.256.BK-S
2 Gang Secondary Line
Socket



Y33.257.BK-M
2 Gang Master Line
Socket



Y33.268.BK-RJ45
1 Gang RJ45



Y33.269.BK-RJ11
1 Gang RJ11



 
Y33.258.BK-RJ45
2 Gang RJ45




Y33.268.BK-CAT6
1 Gang CAT6




Y33.258.BK-CAT6
2 Gang CAT6

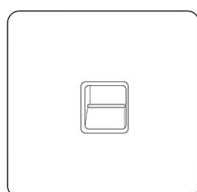

 
Y33.266.W-S
1 Gang Secondary Line
Socket

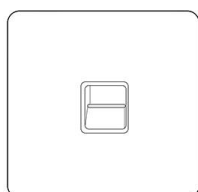


Y33.267.W-M
1 Gang Master Line
Socket

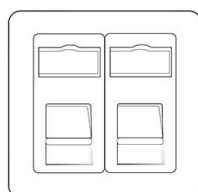 

 
Y33.256.W-S
2 Gang Secondary Line
Socket

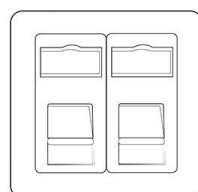


Y33.257.W-M
2 Gang Master Line
Socket

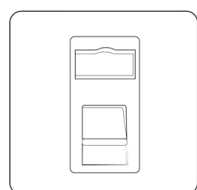 


Y33.268.W-RJ45
1 Gang RJ45

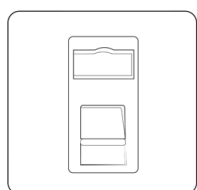 


Y33.269.W-RJ11
1 Gang RJ11

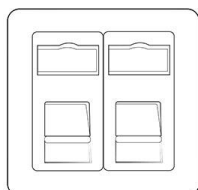 

Y33.258.W-RJ45
2 Gang RJ45

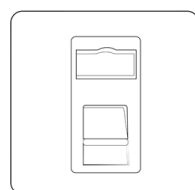 


Y33.268.W-CAT6
1 Gang CAT6

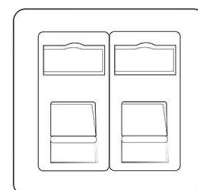 


Y33.258.W-CAT6
2 Gang CAT6

 
Euro Module Plates

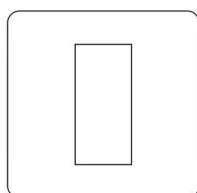

PL.Y33.2691.G
1 Module Euro Plate

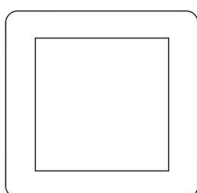 

PL.Y33.2692.G
2 Module Euro Plate

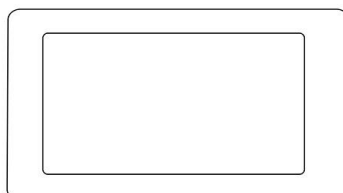 

PL.Y33.2694.G
4 Module Euro Plate

Blank Plates



Y33.231
Single Blank Plate



Y33.232
Double Blank Plate